

bark stopper

INSTRUCTIONS

CAUTION

- 1. Insert battery into the battery compartment matching the polarity
- 2. When the item is not in use for a long period of time, remove the battery and store in a cool or dry place
- 3. This item is not a toy keep away from children

Battery Installation

- 1. Slide battery cover away from unit
- 2. Install 9V battery, and replace battery cover (Battery not included)

Operation

- 1. Switch unit to "On" (Power switch is located on the right side)
- 2. Unit will automatically detect barking and emit an ultrasonic high pitch
- 3. To adjust the sensitivity level, slide the switch between "Low" and "High"
 - A. Low setting : will detect barking up to 13ft away
 - B. High setting: will detect barking up to 16ft away
 - C. Barriers such as walls, doors, or windows will limit the receiving range

Important Note:

- If your pet's barking pitch is very low, the device may not activate
- Dog Training takes time and patience. Your dog's barking behavior will calm down over time
- It is recommended to use this on dogs starting 6 months and up

Wall Mount Installation

- 1. Remove main unit from holder
- 2. Place holder against wall surface and mark both holes with pencil
- 3. Drill small hole using a 1/8" drill bit
 - A. For wood installation: simply use small wood screw for installation
 - B. For hollow wall installation: make sure to use the appropriate drill bit and appropriate wall anchor for your screw
 - C. It is suggested to mount the unit at a height that the dog(s) cannot reach to prevent damage.

FCC

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.