

# EdgeHome®



## TALKING TIRE GAUGE

### CHARACTERISTICS:

- USE IN ANY WEATHER CONDITIONS – DAY OR NIGHT
- MEASUREMENT RANGE 2 TO 99PSI
- SAVE GAS AND EXTEND TIRE LIFE WITH CORRECT RECOMMENDED TIRE PRESSURE
- AUTOMATIC POWER-OFF
- FOR AUTOS, SUVs, LIGHT TRUCKS AND MOTORCYCLES
- INCLUDES 2 X BUTTON CELL BATTERIES (MODEL CR-2032)

### OPERATING INSTRUCTIONS:



1. CHECK COLD TIRE PRESSURE BEFORE DRIVING.
2. REMOVE TIRE VALVE CAP.
3. PRESS “ON” BUTTON AND WAIT FOR 3 SECONDS FOR THE LCD DISPLAY TO READ “0.0”
4. PLACE THE GAUGE NOZZLE ONTO THE TIRE VALVE. PRESS FIRMLY TO ENSURE A GOOD SEAL AND ACCURATE READING.
5. HOLD IN PLACE FOR APPROXIMATELY 3-4 SECONDS, TIRE GAUGE WILL READ THE PRESSURE AND THE READING WILL ALSO BE ON THE LCD SCREEN.
6. TO CLEAR READING, PRESS AND RELEASE “ON” BUTTON. THE DISPLAY WILL RESET TO “0.0”

7. REPEAT ABOVE STEPS FOR THE REMAINING TIRES.
8. REPLACE TIRE VALVE CAP AFTER ALL TIRES HAVE BEEN CHECKED.


## BATTERY REPLACEMENT

- REMOVE THE BODY SET SCREWS AT THE BACK OF OUTER CASING WITH A SMALL PHILLIPS-TYPE SCREWDRIVER AND SEPARATE THE BODY CAREFULLY. **Figure 1**
- UNCLIP THE OLD BATTERIES FROM ITS CONTACTS. **Figure 2**
- MAKE SURE THE “+” IS UPWARD AND INSERT THE NEW BATTERY IN ITS PLACE. **Figure 3**
- CLOSE THE OUTER CASING AND REPLACE THE SCREWS. **Figure 4**
  - DO NOT MIX OLD & NEW BATTERIES.
  - USE ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED.
  - INSERT THE BATTERIES WITH CORRECT POLARITIES.
  - DO NOT SHORT CIRCUIT.
  - DO NOT DISPOSE BATTERIES IN FIRE AS THEY MAY LEAK OR EXPLODE.
  - BUTTON CELL BATTERIES ARE DANGEROUS IF SWALLOWED.
  - ALWAYS KEEP THEM OUT OF REACH OF CHILDREN AND PETS.
  - THIS IS NOT A TOY.


**FIGURE 1**

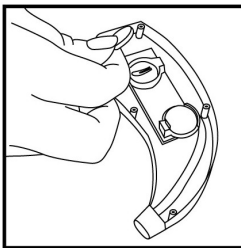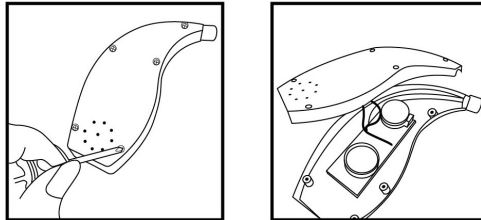  

**FIGURE 2**

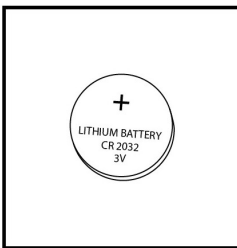 

**FIGURE 3**

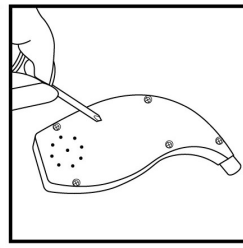 

**FIGURE 4**

ONLY USE TIRE GAUGE AS DIRECTED. ENSURE TIRE VALVE CAP IS FIRMLY PLACED BEFORE DRIVING. PLEASE CHECK YOUR TIRE MANUAL FOR CORRECT TIRE PRESSURE AND MAKE CORRECTIONS IF NECESSARY.

MADE IN CHINA