 


EDGEVANTAGE™

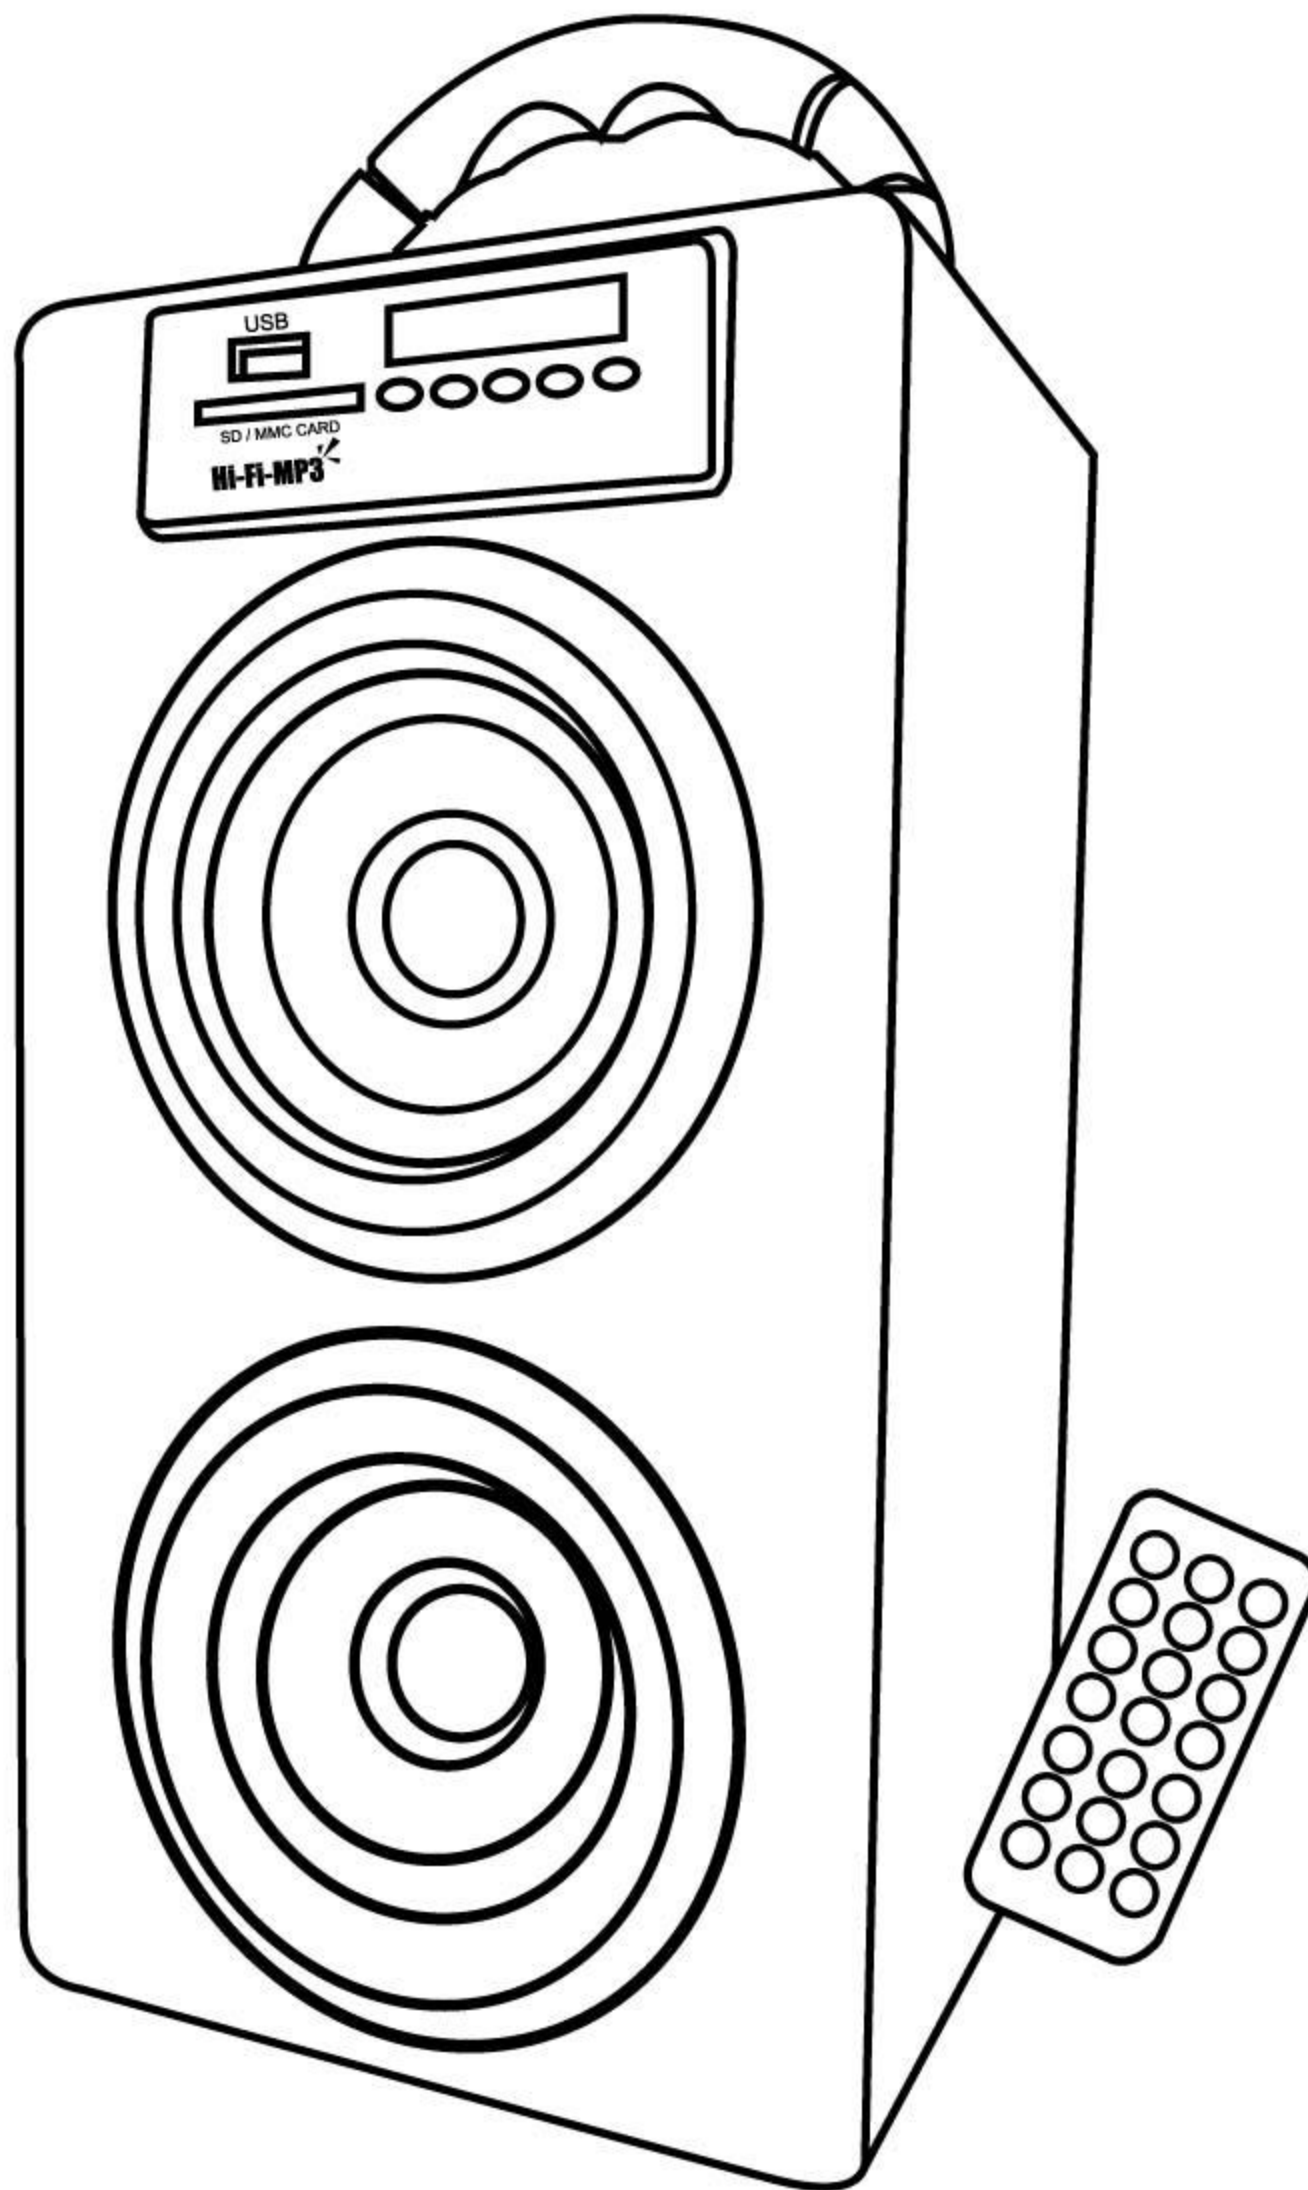

E-052

 
E-058

E-061

Speaker Manual

QUICK REFERENCE GUIDE

FRONT CONTROL PANEL

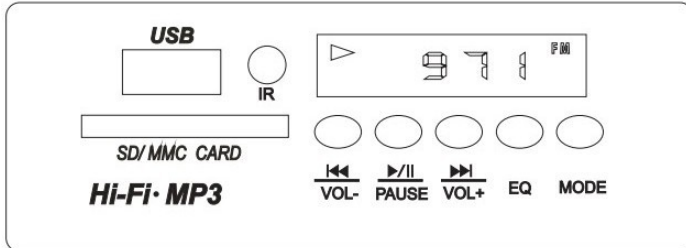

USB



USB SLOT



SD/MMC CARD

SD/MMC CARD SLOT



IR

REMOTE CONTROL SENSOR



USB/SD MODE : PREVIOUS TRACK

FM MODE : PREVIOUS PRESET STATION



USB/SD MODE : PLAY/PAUSE

FM MODE : THIS ACTS AS A VOLUME MUTE BUTTON

LONG PRESS TO AUTO SCAN FM FREQUENCY AND PRESET THE FM RADIO STATIONS



USB/SD MODE : NEXT TRACK

FM MODE : NEXT PRESET STATION

EQ

PRESET EQUALIZER : COUNTRY, POP, JAZZ, ROCK, CLASSIC


MODE

: TO SWITCH FROM USB/SD/FM RADIO/AUX *

*Please refer to the User Manual for AUX Mode function.

REMOTE CONTROL



 STANDBY (THE MAIN POWER SWITCH LOCATED AT THE BACK PANEL OF THE SPEAKER SYSTEM MUST BE IN THE ON POSITION TO USE THIS FEATURE)

 TO SWITCH FROM USB/SD/FM RADIO/AUX

 MUTE



- USB/SD MODE : PLAY/PAUSE
- FM MODE : THIS ALSO ACTS AS A VOLUME MUTE BUTTON
- LONG PRESS TO AUTO SCAN FM FREQUENCY AND PRESET THE FM RADIO STATIONS



- USB/SD MODE : PREVIOUS TRACK
- FM MODE : PREVIOUS PRESET STATION
- LONG PRESS IN USB/SD/FM MODE FOR VOLUME DOWN

REMOTE CONTROL (CONTINUED...)



- USB/SD MODE : NEXT TRACK
- FM MODE : NEXT PRESET STATION
- LONG PRESS IN USB/SD/FM MODE FOR VOLUME UP



5 PRESET EQUALIZER: COUNTRY, POP, JAZZ, ROCK, CLASSIC (ONLY IN USB/SD MODE)



VOL DOWN ONLY AVAILABLE IN USB/SD AND FM MODE, DOES NOT WORK IN AUX MODE



VOL UP ONLY AVAILABLE IN USB/SD AND FM MODE, DOES NOT WORK AUX MODE

 


USB/SD MODE - REPEAT ONE, RANDOM PLAY, REPEAT ALL OR REPEAT SONGS IN A FOLDER ON YOUR DISK

FM MODE : AUTO SCAN & PRESENT THE FM RADIO FREQUENCIES.





SWITCH BETWEEN USB AND SD MODE

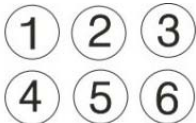


NUMBER BUTTONS

- USB/SD MODE : GO DIRECTLY TO THAT FILE NUMBER
- FM MODE : PRESSING CONSECUTIVE NUMBERS WILL TAKE YOU TO THAT FREQUENCY—I.E. PRESS 9 7 1 AND YOU WILL GET FREQUENCY 97.1

  BACK PANEL CONTROLS

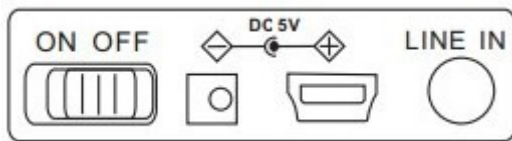

ON/OFF POWER SWITCH

 

USB CHARGING SOCKET (CABLE INCLUDED) FOR CHARGING THE LITHIUM ION BATTERY (INCLUDED).



3.5MM LINE IN FOR AUX CABLE (INCLUDED) TO CONNECT TO COMPATIBLE EXTERNAL DEVICES.

Speaker System Features

- Plays MP3 Files stored in your SD Card or USB Disk
Max Capacity 16GB for SD Card or USB stick (not included)
- FM Radio with up to 30 Preset Memory Stations
- Rechargeable Lithium Ion Battery
- Play/Pause /Forward/Rewind Buttons on unit & remote control.
- Full Function Infrared Remote Control
- On/Off Power Switch
- LINE IN to connect to External Audio Players such as iPod®, iPhone®, iPad®, Blackberry®, Android™, Smartphones, etc.)
- 5 EQ modes: Country, Pop, Rock, Jazz, Classic

Charging the Unit

The speaker System needs to be charged prior to being used. Place the supplied Rechargeable Lithium-ion (BL-5C) into the battery compartment at the back of the unit. Connect one end of the supplied USB cable to your computer or Compatible USB AC/DC Adapter (adapter not included), the other end of the cable connect to the DC 5V jack, which located at the back of unit. Battery needs to be charged for **4-6** hours. Do not charge longer than **6** hours as this will shorten the life of the battery.











DO NOT USE THE SPEAKER SYSTEM WHILE CHARGING.

IF YOU WANT TO USE AC POWER, PLEASE REMOVE THE BATTERY FROM THE BATTERY COMPARTMENT.

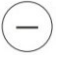Playing MP3 Files through the Speaker System using the SD Card or the USB Stick

The control panel is located on the front of the Speaker System.






1. Plug in your USB Disk or SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY.
2. Turn on the power switch. The Speaker system will enter AUX mode.
3. Press the MODE button until the desired Media source shows on the LED display.
4. The MP3 files on your media should start playing from the source selected.

5. Turn up/down the volume to the desired level from the unit's volume control on the control panel by long pressing either  or , or from the remote by pressing  for Volume Down or  Volume Up. The sound output quality of speakers will depend on the quality of the MP3 files.
6. On the control panel short press the  to listen to the previous track or  to skip to the next track OR from the remote control, press  for the previous track or  for the next track.
7. To Pause a track, press the  button on the Control Panel or the  on the Remote Control.
8. Please remember to turn off the power of the Speaker System before removing the USB Disk or SD Card – FAILURE TO FOLLOW THESE INSTRUCTIONS MAY DAMAGE THE SPEAKER SYSTEM & WILL VOID THE WARRANTY.
9. For external Devices such as iPods®, iPhones®, iPads®, smartphones, MP3, MP4 players, or other audio devices use the included 3.5mm to 3.5mm aux cable and connect it to the LINE IN jack.

PLEASE NOTE THAT WHILE IN AUX MODE, THE VOLUME CAN ONLY BE CONTROLLED FROM YOUR EXTERNAL DEVICE & NOT FROM THE UNIT OR REMOTE CONTROL.

PLEASE MAKE SURE TO REMOVE THE 3.5MM AUX (AUDIO) CABLE WHEN SWITCHING TO USB/SD OR FM RADIO. SPEAKER WILL NOT OPERATE IN ANOTHER MODE IF THE CABLE IS NOT REMOVED.

Listening to the FM Radio from the Speaker

1. Press the Mode button on the Speaker or from the Remote Control to go into the FM source. Fully extend the Telescopic Antenna for the best radio reception.
2. Long Press  on the unit to go into Auto scan and the unit will store the frequencies with strong signal reception into the preset stations. After all stations have been searched & stored, use the   buttons to switch between preset stations, OR from the Remote Control, Press  or  to access the preset stations up or down.
3. To Tune to a specific Radio Frequency, use the Number Pad on the remote control and enter a frequency number, i.e. press 971 to get 97.1

iPod®, iPhone®, & iPad® are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc.

The Trademark Blackberry® is owned by Research In Motion Limited and is registered in the United States and may be pending or registered in other countries. Edgevantage is not endorsed, sponsored, affiliated with or otherwise authorized by Research In Motion Limited.

Android™ is a registered Trademark of Google Inc.

All other Trademarks & Trade Names belong to their respective owners.

Please keep this manual in a safe place for future reference.