

SOUNDLOGIC™ | XT

Wireless Rave Bluetooth LED Speaker
BCCS-6/6395



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
& RETAIN FOR FUTURE USE**

Getting Started

Remove the unit from the box.

Remove any packaging from the product.

Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

Rave Bluetooth LED Speaker

USB Charging cord

3.5mm auxiliary cord

Instruction manual

Features

1. Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, Blackberry, smartphones, tablets, computers and more.
 2. Multi-Color Lights jive to the beat of music.
 3. Play music through Bluetooth, Auxiliary and Micro SD Card* & USB Flash Drive*.
 4. Built-In Microphone
 5. FM radio
 6. Rechargeable built-in battery
 7. Micro USB charging cord & Auxiliary cord included.
- *Micro SD Card & USB Flash Drive not included.

IMPORTANT SAFETY INFORMATION


1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. Place unit on sound, even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not put objects into openings.
9. Keep free of dust, lint, hair etc.
10. Do not use this unit for anything other than its intended use.



 
11. Keep this product out of reach of children.

12. This product is not a toy.

13. Do not play music at excessive levels especially near children, as damage to hearing may occur.

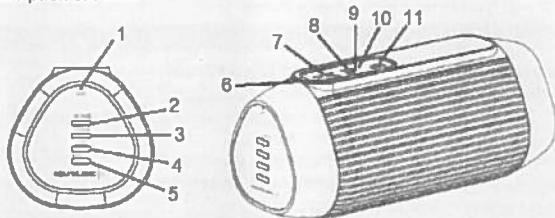Description of Parts:



1	Built-In Mic	For Hands-Free Conversation
2	Mode button / 	Mode - For Call Answer / Call End / Redial Button (in Bluetooth mode only), for searching FM stations, for changing different modes of operation between FM radio, Aux-in, Micro SD and USB. Or short press will pause or restart the music.
3	Volume increase (V+) / 	Short press will skip to the next track, or long press will increase the volume level
4	LED button	Long press to turn on / off the Multi-Color Lights, or short press for changing different light patterns
5	Volume decrease (V-) / 	Short press will return to the previous track, or long press will decrease the volume level
6	USB Flash Drive slot	Plays music from USB Flash Drive (not included)
7	Micro SD Card slot	Plays music from Micro SD Card (not included)
8	DC Charging Port (Micro USB Charging Port)	To charge the speaker (Charging cord included)
9	Auxiliary Port	Plays music through Auxiliary cord (included)
10	LED Light Indicator	Indicates the Recharging status
11	MP3/OFF/BT power switch	MP3: Play FM or Auxiliary or Multimedia (USB Flash Drive or Micro SD Card), OFF: Switch on/off the speaker, BT: Turn on Bluetooth mode

(Note: Some of above function only can be used in Bluetooth mode only. in Aux mode, you may need to control through your source device.)

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. The Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take around 4 hours to fully charge the battery.

Note: in order to have better battery life, please do not charge for over 4 hours.

Multi-Color Lights

1. By default, the Multi-Color Lights turn on, once you've turned On the speaker. If you wish to turn off the lights, long press the "LED button".
2. To turn On the Lights, long press the "LED button" again.
3. Short press the "LED button" will change different light patterns.

Turn the speaker to Bluetooth pairing mode -

1. Slide the "MP3/OFF/BT power switch" to BT position.
 2. You would hear the indication tone; the speaker is now in pairing mode.
- (Note: Speaker automatically pairs with the previously paired devices)

Pairing your device with Bluetooth Speaker -

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 27-33 Feet. Simply follow the below steps.

1. Slide the "MP3/OFF/BT power switch" to BT position.
2. You would hear the indication tone; speaker is now in pairing mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is "SL RAVE", pair it with this device.
6. If required, enter the password '0000' to confirm to finalize pairing.
7. Once paired successfully, you would hear a beep tone.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follow the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through Bluetooth speaker.

Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Description
Answer Incoming Call	Incoming Call	Press the Mode button once to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the Mode button
Volume Increase	During a call	Long press on the V+ button will increase the volume
Volume Decrease	During a call	Long press on the V- button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Mode button twice

Listening to Music via Bluetooth (Wireless)

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Description
Increase / Decrease Volume	Playing music	Long press V+ to increase the volume or long press V- to decrease the volume
Pause	Playing music	Press ⏸ once to pause the music
Play	Pause	Press ⏸ once to resume the music
Skip Forward / Skip Backward	Playing music	Short press ⏭ to skip forward the track. Short press ⏮ to skip backward the track.

(Note: The above functions only can be used in Bluetooth mode only. In Aux mode, you may need to control through your source device.)

Listening to FM radio

1. Slide the "MP3/OFF/BT power switch" to MP3 position.
2. It will go to FM radio function.
3. Short press the Mode button for searching and recording all radio stations within frequency range 87.5-108MHz.
4. Press the **⏭** or **⏮** button for listening next or previous preset radio station.
5. Long press V+ to increase the volume or long press V- to decrease the volume.

Listening to Music using AUX-In Mode

1. Slide the "MP3/OFF/BT power switch" to MP3 position.
2. Insert the 3.5 mm Aux in cable (provided) to the Line-in jack of the speaker.
And, the other end of the cable connects to the audio device (such as computer / tablet /etc.).
3. Select your favorite song at the source device.
4. Long press V+ to increase the volume or long press V- to decrease the volume.

Listening to Music using USB Flash Drive / Micro SD Card

1. Slide the "MP3/OFF/BT power switch" to MP3 position.
2. Insert SD card or USB flash drive into the USB or SD Card Slot. Music would be automatically streamed.
3. Press ► or ◀ to move forward or backward on your playlist.
4. Long press V+ to increase the volume or long press V- to decrease the volume.
5. Short press ► to Play or Pause a track.

Tips

1. Press the "Mode button" to switch different functions of the speaker between – FM radio / AUX-in / SD-USB.
2. When the unit is not in use, turn OFF the device to save the battery power.

Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result.

Do not use outdoors in wet or in damp surroundings.

Specification

Bluetooth version	: 2.1
Speaker	: 2 x 3 Watts
Unit Size	: 7"x3"x3"
Unit Weight	: 404g
Play time	: Up to 2 hours
Charge Voltage	: DC5V (USB)
Bluetooth Range	: 10m
Built-in Rechargeable Battery	: 3.7V / 1200mAh

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.

- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.